

Vibration Sensor

- Safeguarding valuable objects in indoor and outdoor areas like painting, vases, garden furniture or barbecues
- Detects touching and moving of objects
- Detection sensitivity adjustable in 2 steps
- Fixation by velcro strap or glue pad (included)
- Battery operated (1 x CR2430 button cell, included)
- Low battery warning at the base unit
- Adjustable Sensitivity
- Outdoor Usage Possible
- Handy Velcro Strap Included



Color	Item Num.	Size WxDxH	Weight	EAN
grey	6107	40 x 40 x 15 mm	0,02 kg	4030152061075

