

# Hotel safe Leisure

## Important Remarks

- For the purpose of security, please change the codes prior to use
- Please keep codes in a safe place. Do not use personal data like birthdays, telephone numbers ...
- Please keep key in a safe place but not in the safe itself!
- If the safe will not be used for a long time, please take out batteries

## Opening

To Open the Safe Enter the personal code ( **pre-selected 1-2-3-4** ).

The door will open automatically. Caution: Display will show "ERROR" when wrong code is used.

Four wrong code inputs consecutively puts the safe in secure mode.

Display will show "HOLD15" In effect the keypad is inactive for 15 minutes, eliminating chances of unauthorized operations.

## Closing

Close the door and hold it. Enter existing or a

To Lock the Safe

new personal code (4-6 digits), press "LOCK" key. The door will close automatically.

Caution: If there is a barrier blocking the door, the display will show "ERROR2" and the bolts draw back automatically.

Remove the barrier and try it again. In case of wrong entry digit, you can delete it by pressing "CLEAR".

## Mounted

The product must be mounted by securing either the back or the bottom of the safe.

You may select the expansion bolt when it is a concrete wall surface or select clamping bolt when it is a wooden wall surface.

## How to open with emergency key

To Open the Safe With Emergency Key Take off the cover of emergency key in the panel, insert the emergency key and turn clockwise 90 degrees to the left, display will show "MANUAL".

Open the door and turn the key 90 degrees clockwise, press "LOCK" key and the bolts will be automatically retracted.

## Replace batteries

TO REPLACE BATTERIES If the voltage of batteries is deficient, the display will show "BA-LO" and batteries have to be replaced.

Please look at the environmental standards. Installation

## How to set the mastercode

### Basis code : 0-0-0-0-0-0

To set Master Code To change master code, lock must be opened (that is, the bolts is retracted).

Press Clear twice: the display will show **PROG**.

Enter the old code: 0-0-0-0-0-0 : the display will show **NEU**.

Now enter your new 6 digit code: the display will show **AGAIN**.

Enter your new 6 digit code again and the display will show **DONE**.

The new master code has been set.

## To check 100 last time opening

To show the last 100 actions on the safe, the lock must be opened (that is, the bolts are retracted). Press key "Clear" twice, the display shows "PROG", input "770626", the display will show:

1st : the No. of record;

2nd : the action of door

"O" means opening record

"C" means locking record

3rd means different opening method

"01" means - by user's code;

"02" means - by master code;

"09" means – by mechanical key.